

3.7.3 Mount your Nuvo-2500 and Nuvis-2520at on the DIN Rail

1. Take away the food pad on the bottom of your system. Refer to [Figure 58](#)
2. Get the DIN-rail bracket from your accessory box, and tighten the four M4 pan screws to attach the DIN-rail bracket on your system.

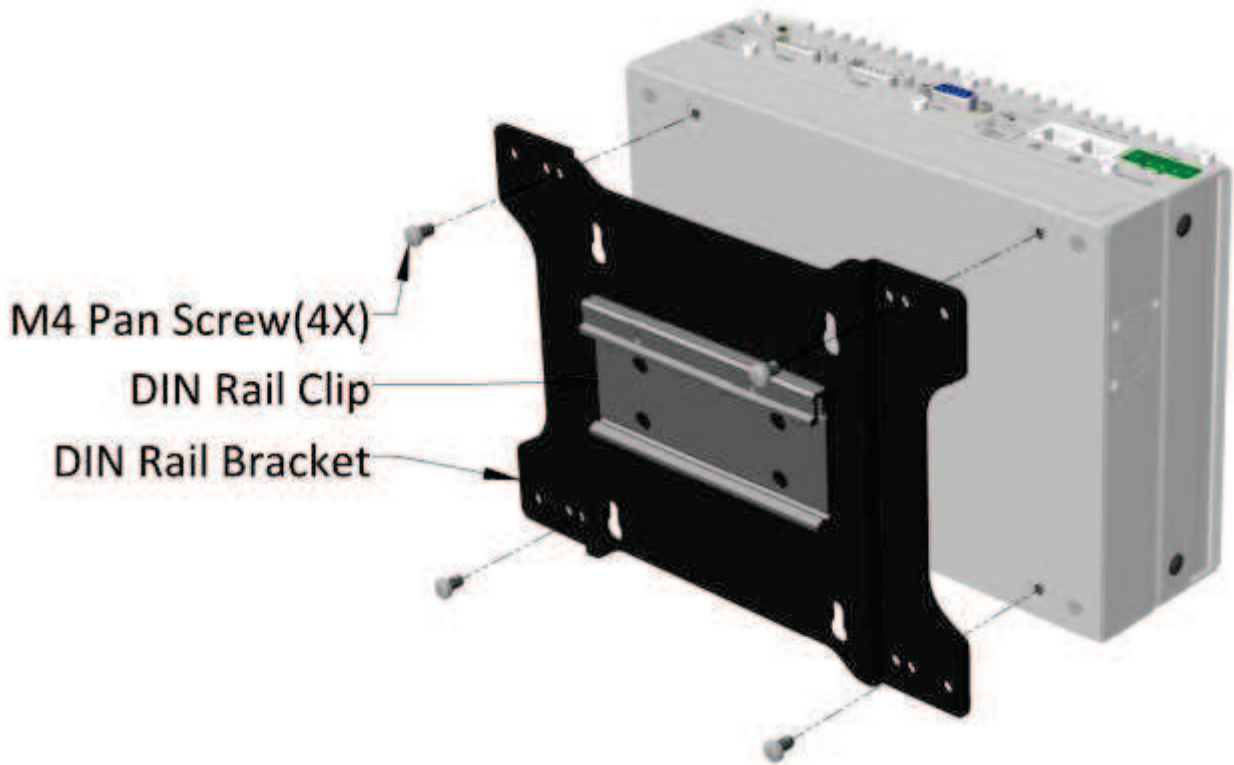


Figure 63: Assemble the DIN-rail Bracket Nuvo-2500 and Nuvis-2520at

3. You can mount the system to DIN rail with the DIN rail clip

3.7.4 Mount your Nuvo-2510VTC on the DIN Rail

1. Take away the food pad on the bottom of your system. Refer to [Figure 60](#)
2. Get the DIN-rail bracket from your accessory box, and tighten the four M4 pan screws to attach the DIN-rail bracket on your system.

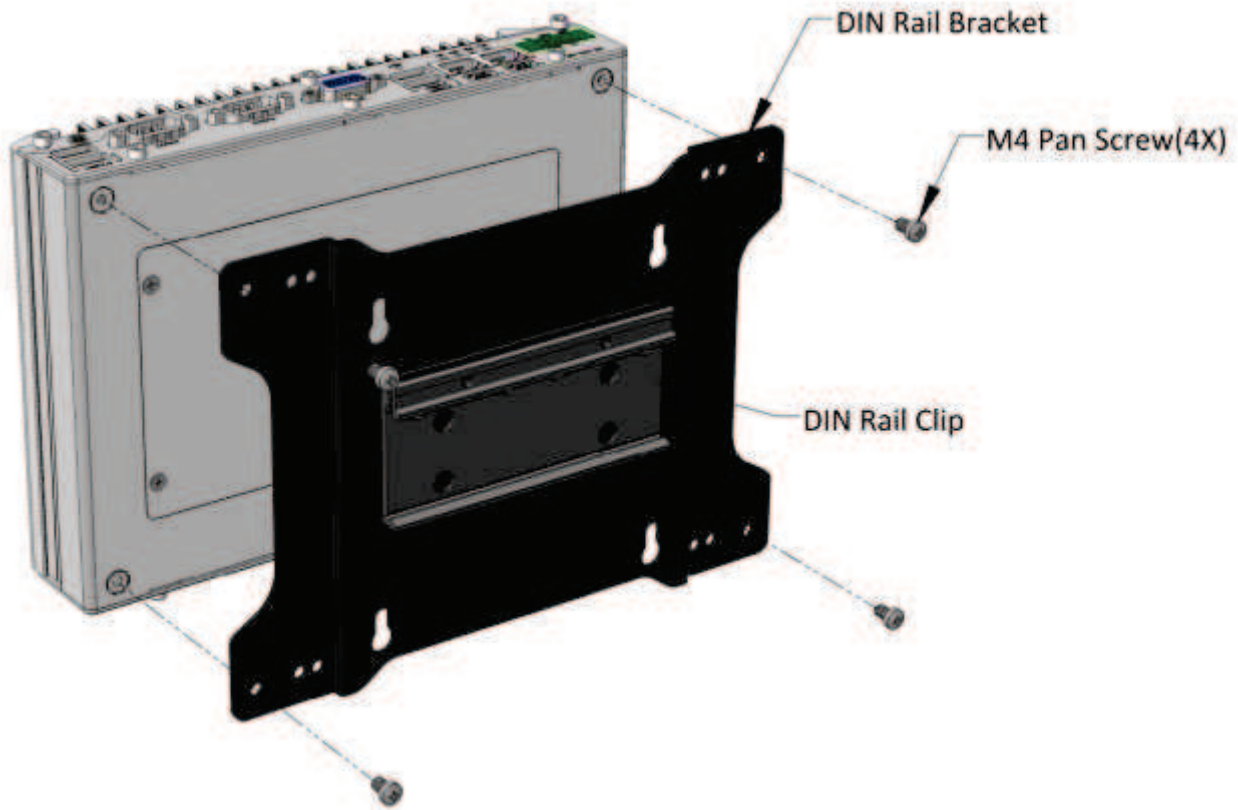


Figure 64: Assemble the DIN-rail Bracket on Nuvo-2510VTC

3. You can mount the system to DIN rail with the DIN rail clip